
















































 




















| Original   | Replacement  | Original  | Replacement   |
|--|--|---|---|
|  Power      |  Power              |  Pause     |  Pause / Step / Freeze   |
|  Mute       |  Mute / Dimmer      |  EPG       |  Guide / EPG / -/-       |
|  1          |  1                  |  Up/PR+    |  Up                      |
|  2          |  2                  |  Menu      |  Menu / Home             |
|  3          |  3                  |  Left      |  Left                    |
|  Tv/Radio   |  TV/Radio /         |  Vol-      |  Vol-                    |
|  4          |  4                  |  OK/List   |  OK                      |
|  5          |  5                  |  Right     |  Right                   |
|  6          |  6                  |  Vol+      |  Vol+                    |
|  ↑          |  CH+ / Page+        |  Info      |  Info / Angle            |
|  7         |  7                 |  Down/PR- |  Down                   |
|  8        |  8                |  Exit    |  Exit / Cancel / Clear |
|  9        |  9                |  [+]     |  Zoom / Size           |
|  ↓        |  CH- / Page-      |  FAV     |  Fav / Marker / PC     |
|  0        |  0                |  Record  |  Rec / Rec Mode        |
|  ←PR      |  Back / Return    |  Stop    |  Stop / Hold           |
|  PAL/NTSC |  Picture / Format |  Audio   |  Audio / Lang I/II     |



