
 
















Original	Replacement	Original	Replacement
	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle/D.Tuning		Subtitle / EQ
	Picture Navi		Picture / Format
	S-Air Mode		Zoom / Size
	Sleep		Sleep / Timer
	Tv Input		AV / Input / RDS
	System		D.Menu / Top














 

 
 







Original	Replacement	Original	Replacement
	Display/Tools		Setup / OPT /
	One -Touch Play		Text / Goto
	Menu/DVD		Menu / Home
	Theatre		TV/Radio /
	Up		Up
	Angle		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Volume+		Vol+
	Dynamic Bass		Smart / List
	Function+		CH+ / Page+
	Volume-		Vol-
	Display		Display / Media


 
 



Menu/Enter

Menu






Original	Replacement	Original	Replacement
	Function-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Night		Red / Netflix / Search
	DVD Top Menu		Green / APP / Repeat
	Disc Skip		Blue / Prime Video / Random
	Power Tv		Shift + Power
	Tv Vol-		Shift + Vol-
	Tv Vol+		Shift + Vol+

Original	Replacement	Original	Replacement
	→/ > Step/Advance		Shift + >> /
	←/ < Step/Replay		Shift + << /





Original	Replacement
 Power	 Power
 Tv Vol+	 Vol+
 Tv Input	 AV / Input / RDS
 Tv Vol-	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Enter	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Replacement
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Tools	 Setup / OPT /
 Prog-	 CH- / Page-
 Prog+	 CH+ / Page+

