



Original	Replacement
Power	Power
TC Reset	Exit / Cancel / Clear
Display	Display / Media
Data Code	Shift + Display / Media
Search Select	AV / Input / RDS
I<<	I<< / Preset-
>>I	>>I / Preset+
Menu	Menu / Home
↑	Up
Set	Setup / OPT /
↓	Down
<<	CH- / Page-
>>	CH+ / Page+
x1/10	Red / Netflix / Search
x1/3	Green / APP / Repeat
x1	Yellow / YouTube / Repeat
x2	Blue / Prime Video / Random

Original	Replacement
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode
<</REW	<< / Tune-
Play	Play / Slow
>>/FF	>> / Tune+
Stop	Stop / Hold

