

 





 

 

 



 



 



 



 






 
 

 

 

 









 









 
 
 

 







Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Up	 Up
 Power	 Power	 Left	 Left
 Setup	 Setup / OPT /	 Enter	 OK
 Zoom	 Zoom / Size	 Right	 Right
 Mode	 Picture / Format	 Down	 Down
 Angle	 Info / Angle	 Music	 Sound / Title
 Sub-T	 Subtitle / EQ	 Menu	 Menu / Home
 Video	 4	 Display	 Display / Media
 I<<	 I<< / Preset-	 Audio	 Audio / Lang I/II
 >>I	 >>I / Preset+	 OTB	 Guide / EPG / -/--
 Vol+	 Vol+	 Repeat	 Green / APP / Repeat
 <<	 << / Tune-	 Interval Time	 Sleep / Timer
 >>	 >> / Tune+	 Slide Show	 TV/Radio /
 Vol-	 Vol-	 DVD Play	 Blue / Prime Video / Random
 Stop	 Stop / Hold	 P/N	 Red / Netflix / Search
 Play	 Play / Slow	 Preview On/Off	 Fav / Marker / PC
 Pause	 Pause / Step / Freeze	 SR	 Smart / List





Original	Replacement	Original	Replacement
	 Yellow / YouTube / Repeat		

