



Original	Replacement
POWER	Power
FM MODE	Fav / Marker / PC
LW	Sound / Title
MW	Picture / Format
FM	+ Shift + 6
SLEEP	Sleep / Timer
TUNING/TIMER	CH- / Page-
TUNING/TIMER	CH+ / Page+
SET	Menu / Home
TIMER STANDBY	+ Shift + Power
CLOCK/TIMER	+ Shift + Sleep / Timer
1	1
2	2
3	3
4	4
5	5
6	6

Original	Replacement
7	7
8	8
9	9
10/0	0
CD	+ Shift + 3
AUTO/AI EDIT	Setup / OPT /
PRGM/CON EDIT/A-B REPEAT	Audio / Lang I/II
PRGM AMP	Back / Return
+10	Guide / EPG / -/-
EJECT CD	Eject / Surround
<</I<< CD	<< / Tune-
>>/>>I CD	>> / Tune+
STOP CD	Stop / Hold
PLAY/PAUSE CD	Play / Slow
DAT	Display / Media
<</I<< DAT	I<< / Preset-
>>/>>I DAT	>>I / Preset+





Original	Replacement
STOP DAT	Shift + Stop /
Play DAT	Pause / Step / Freeze
PAUSE DECK2	Down
<< DECK 2	Left
>> DECK 2	Right
STOP/EJECT	OK
<> DECK 2	Up
REC/REC MUTE	Rec / Rec Mode
<< DECK1	Shift + Left
>> DECK1	Shift + Right
STOP EJECT DECK	Shift + OK
<> DECK 1	Shift + Up
VIDEO 1	Shift + 4
VIDEO 2	Shift + 7
BS	Subtitle / EQ
DIGITAL DIRECT	Zoom / Size
TAPE	Shift + 5

Original	Replacement
BBE	Text / Goto
REAR VOLUME	Shift + CH- /
REAR VOLUME	Shift + CH+ /
SURROUND	AV / Input / RDS
MUTE	Mute / Dimmer
ON/OFF/GEQ/A	Exit / Cancel / Clear
PRGM	TV/Radio /
MANUAL	Info / Angle
VOL-	Vol-
VOL+	Vol+

