




 





















 

 









 
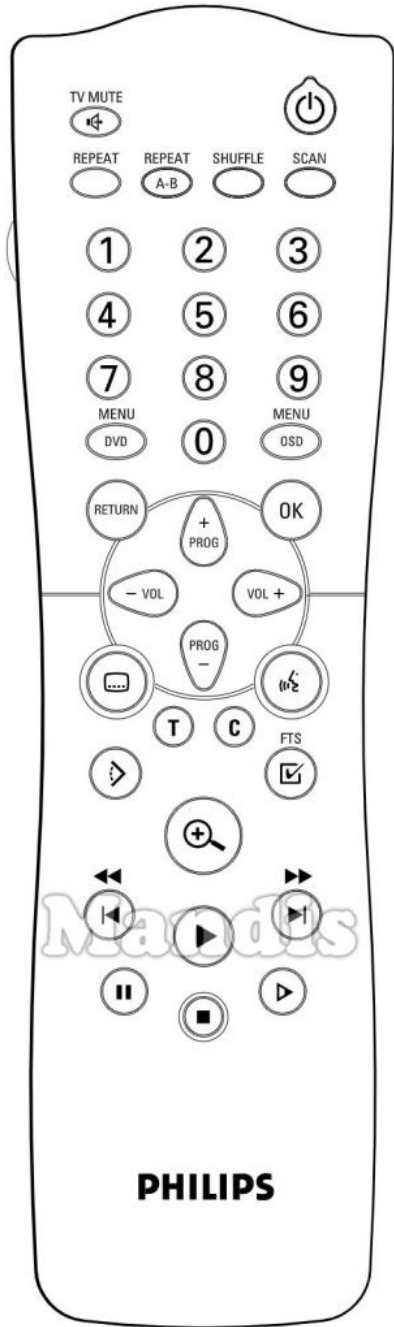









 

 


 

 




 









Original	Replacement
 Power	 Power
 Repeat	 Text
 A-B Repeat	 Options
 Shuffle	 AV
 Scan	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DVD Menu	 D. Menu
 0	 0
 OSD Menu	 Menu

Original	Replacement
 Return	 Back
 Up	 Up
 P+	 Ch +
 OK	 Ok
 Left	 Left
 Vol-	 Vol -
 Right	 Right
 Vol+	 Vol +
 [...]	 Subt
 Down	 Down
 P-	 Ch -
 Audio	 Dual
 T-C	 TV/R
 Angle	 Format
 Zoom	 Eject
 <<	 <<
 I<	 I<<





	Original	Replacement		Original	Replacement
	Power		Power		Down
	1		1		I<<
	2		2		I<<
	3		3		>>I
	4		4		>>I
	5		5		Stop
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Up		Up		
	OK		Ok		
	Vol -		Vol -		
	Left		Left		
	Vol +		Vol +		
	Right		Right		

