



Original	Replacement	Original	Replacement
	Power		8
	Power Tv		9
	Vol+ Tv		FPlay
	CH+ Tv		Last View
	Drive Select		0
	Input AV Tv		NET
	Vol- Tv		Netflix
	CH- Tv		I<< / Skip
	1		Skip >>I
	2		<< / Slow/Search
	3		Slow/Search >>
	Page/CH+		Stop
	4		Pause
	5		Play
	6		i/Status
	Page/CH-		Exit
	7		Guide
	Power		8
	Shift + Power		9
	Vol+		Shift + Green / APP / REPEAT
	Shift + CH+ /		Fav / Marker / PC
	Smart / List		0
	Shift + AV / Input / RDS		Display / Media
	Vol-		Shift + Red / Netflix / SEARCH
	Shift + CH- /		I<< / Preset-
	1		>>I / Preset+
	2		<< / Tune-
	3		>> / Tune+
	CH+ / Page+		Stop / Hold
	4		Pause / Step / Freeze
	5		Play / Slow
	6		Info / Angle
	CH- / Page-		Exit / Cancel / Clear
	7		Guide / EPG / -/-



