





 
 







 
 












 





 

 





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Function	 D.Menu / Top
 TFT Mode	 Display / Media
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 --/10+	 Guide / EPG / --
 Mute	 Mute / Dimmer

Original	Replacement
 PBC/Menu	 Menu / Home
 Clear	 Exit / Cancel / Clear
 0	 0
 Setup	 Setup / OPT /
 Up	 Up
 Search	 Red / Netflix / Search
 Vol+	 Vol+
 Left	 Left
 OK	 OK
 Right	 Right
 Vol-	 Vol-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Down	 Down
 Stop	 Stop / Hold
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-



