


 









 
 



 








 

 





 
 

 
 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Auto	 Smart / List
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Display	 Display / Media
 Nicam	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 +/-	 Shift + Guide / EPG / +/-
 Recall	 Back / Return
 LCD Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Text	 Text / Goto
 Hold	 Stop / Hold





Original	Replacement	Original	Replacement
 Index	 D.Menu / Top		
 Size	 Zoom / Size		
 EPG	 Guide / EPG / -/--		
 Subtitle	 Subtitle / EQ		
 Subpage	 Shift + Subtitle / EQ		
 Reveal	 TV/Radio /		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 FAV	 Fav / Marker / PC		
 FAV-	 << / Tune-		
 FAV+	 >> / Tune+		
 Lang	 Audio / Lang I/II		
 Aspect	 Shift + Picture / Format		

Original	Replacement	Original	Replacement

