

















 



 












	Original	Replacement	Original	Replacement
	Power			
	Bluetooth / AUX			
1				
2				
3				
4				
5				
6				
				
				
				
	Vol+			
	Play / Pause			
	Play / Pause			
	Vol-			
	I<<			
	>>I			
	Dislike			
	Like	