



Original	Replacement	Original	Replacement
Up	Up	[]	Subtitle / EQ
Page+	CH+ / Page+	7	7
Left	Left	8	8
Vol-	Vol-	9	9
OK	OK	Input	AV / Input / RDS
Right	Right	Sleep	Sleep / Timer
Vol+	Vol+	0	0
Page-	CH- / Page-	Mute	Mute / Dimmer
Down	Down	Text	Text / Goto
Power	Power	Woofer	Setup / OPT /
1	1	(())	Sound / Title
2	2	Audio	Audio / Lang I/II
3	3	Index	Info / Angle
Menu	Menu / Home	Normal	Smart / List
4	4	Recall	Back / Return
5	5	System	D.Menu / Top
6	6	Time	Shift + Sleep / Timer





Original		Replacement		Original		Replacement	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

