 

 





 











 



 



 

 













 



 



 

 





 



 

 





Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	D.Setup/Index		D.Menu / Top		Up		Up
	Mute		Mute / Dimmer		Info		Info / Angle
	Play/Hold		Play / Slow		Left		Left
	Pause/Hold		Pause / Step / Freeze		Ok		OK
	Stop/Mix		Stop / Hold		Right		Right
	<</Cancel		<< / Tune-		Exit		Exit / Cancel / Clear
	>>/Size		>> / Tune+		Down		Down
	I<</Reveal		I<< / Preset-		Vol+		Vol+
	>>I/Subpage		>>I / Preset+		Eject/Auto		Smart / List
	S.Mode		Sound / Title		Ch+		CH+ / Page+
	Subtitle		Subtitle / EQ		Vol-		Vol-
	P.Mode		Picture / Format		Display		Display / Media
	Sleep		Sleep / Timer		Ch-		CH- / Page-
	Nicam/Audio		Setup / OPT /		1		1
	D.Menu/Text		Text / Goto		2		2
	Input		AV / Input / RDS		3		3





Original	Replacement	Original	Replacement
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
10+	→←/10+	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT	0
TITLE FAV	Fav/Title	PC FAV MARKER	Fav / Marker / PC
A-B	Red/A-B	NETFLIX SEARCH	Red / Netflix / Search
PROG	Green/Prog	APP REPEAT	Green / APP / Repeat
	Yellow/Repeat	YouTube REPEAT A-B	Yellow / YouTube / Repeat
GOTO	Blue/Goto	Prime Video RANDOM	Blue / Prime Video / Random
STEP	Step	SHIFT + STEP - FREEZE 	Shift + Pause / Step /
ASPECT	Aspect	SHIFT + FORMAT PICTURE	Shift + Picture / Format
ANGLE	Angle	SHIFT + ANGLE INFO	Shift + Info / Angle

