 


 





 

 

 





Original	Replacement
 1	 1
 Standby / On	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Enter	 OK
 Down	 Down
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 Display	 Display / Media
 DVD Set Up	 Setup / OPT /
 Top Menu	 D.Menu / Top
 Return	 Back / Return
 Menu	 Menu / Home
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 <I	 << / Tune-
 I>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 S Title	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle







































Original	Replacement
 Zoom	 Zoom / Size
 PRG	 TV/Radio /
 Repeat 1/All	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Random	 Blue / Prime Video / Random
 CLR	 Exit / Cancel / Clear
 NTSC/PAL	 Picture / Format

Original	Replacement





Original	Replacement	Original	Replacement
On/Off	 Power		
Audio Off	 Mute / Dimmer		
Prev.	 I<< / Preset-		
Next	 >>I / Preset+		
Title	 Sound / Title		
Lang	 Audio / Lang I/II		
Subt.	 Subtitle / EQ		
Zoom	 Zoom / Size		
Progr.	 TV/Radio /		
Top Menu	 D.Menu / Top		
C/CH	 Text / Goto		
DVD/TV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		

Original	Replacement	Original	Replacement
Menu Down	 Down		
Return	 Back / Return		
Volume+	 Vol+		
Auto/Track	 Smart / List		
Volume-	 Vol-		
1	 1	1	
2	 2	2	
3	 3	3	
4	 4	4	
5	 5	5	
6	 6	6	
7	 7	7	
8	 8	8	
9	 9	9	
+10	 Guide / EPG / -/-		
0	 0	0	
Rep/A-B	 Yellow / YouTube / Repeat		

