



















































 

















Original		Replacement		Original		Replacement	
	Power		Power		CH-		CH- / Page-
	CBL/SAT		0		Mute		Mute / Dimmer
	Media Player		Guide / EPG / -/--		Volume-		Vol-
	Blu-ray/DVD		2		Info		Info / Angle
	Game		Fav / Marker / PC		Option		Menu / Home
	AUX		7		Up		Up
	Tuner		6		Left		Left
	Phono		5		Enter		OK
	TV Audio		1		Right		Right
	CD		3		Back		Back / Return
	USB		8		Down		Down
	Bluetooth		9		Setup		Setup / OPT /
	Internet Radio		4		I<</Tune-		I<< / Preset-
	Heos		Smart / List		I<</Tune-		<< / Tune-
	CH+		CH+ / Page+		Play/Pause		Play / Slow
	ECO		Zoom / Size		>>I/Tune+		>>I / Preset+
	Volume+		Vol+		>>I/Tune+		>> / Tune+





Original		Replacement		Original		Replacement	
	Band		Display / Media				
	Stop/Mode		Stop / Hold				
	Memory		Eject / Surround				
	Smart Select 1		Red / Netflix / Search				
	Smart Select 2		Green / APP / Repeat				
	Smart Select 3		Yellow / YouTube / Repeat				
	Smart Select 4		Blue / Prime Video / Random				
	Speaker		Subtitle / EQ				
	Sleep		Sleep / Timer				
	Dimmer	 + 	Shift + Mute / Dimmer				
	Sound Mode		Sound / Title				





 

 







Original	Replacement
Power	Power
CBL/SAT	0
Media Player	Guide / EPG / -/--
Blu-ray/DVD	2
Game	Fav / Marker / PC
AUX	7
Tuner	6
Phono	5
TV Audio	1
CD	3
USB	8
Bluetooth	9
Internet Radio	4
Heos	Smart / List
CH+	CH+ / Page+
Volume+	Vol+
CH-	CH- / Page-

Original	Replacement
Mute	Mute / Dimmer
Volume-	Vol-
Up	Up
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
I<</Tune-	I<< / Preset-
I<</Tune-	<< / Tune-
Play/Pause	Play / Slow
>>I/Tune+	>>I / Preset+
>>I/Tune+	>> / Tune+
Band	Display / Media
Stop/Mode	Stop / Hold
Memory	Eject / Surround
Smart Select 1	Red / Netflix / Search





Original		Replacement		Original		Replacement	
	Smart Select 2		Green / APP / Repeat				
	Smart Select 3		Yellow / YouTube / Repeat				
	Smart Select 4		Blue / Prime Video / Random				
	Sleep		Sleep / Timer				

