



Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
Sub-T	Subtitle / EQ	FAV	Fav / Marker / PC
Lang	Audio / Lang I/II	Down/CH-	Down
Mute	Mute / Dimmer	Tv/Radio	TV/Radio /
EPG	Guide / EPG / -/--	1	1
Goto	Shift + Text /	2	2
Page+	CH+ / Page+	3	3
TTX	Text / Goto	Recall	Back / Return
Repeat	Shift + Green / APP /	4	4
Page-	CH- / Page-	5	5
Menu	Menu / Home	6	6
Up/CH+	Up	Info	Info / Angle
Exit	Exit / Cancel / Clear	7	7
Vol-	Vol-	8	8
Left	Left	9	9
OK	OK	0	0
Right	Right	<<	<< / Tune-





	Original	Replacement	Original	Replacement
		>>		>> / Tune+
		l<<		l<< / Preset-
		>>l		>>l / Preset+
		Play		Play / Slow
		Pause/Time Shift		Pause / Step / Freeze
		Stop		Stop / Hold
		Rec		Rec / Rec Mode
		Red/PVR		Red / Netflix / Search
		Green/V-Format		Green / APP / Repeat
		Yellow/Aspect		Yellow / YouTube / Repeat
		Blue/Timer		Blue / Prime Video / Random

