 






















 
























 



















 










 
















Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute / Dimmer	 +10	 Guide / EPG / -/-
 L/R/ST	 D.Menu / Top	 Clear	 Exit / Cancel / Clear
 Open / Close	 Eject / Surround	 Menu	 Menu / Home
 NTSC / PAL	 Picture / Format	 Up	 Up
 1	 1	 Search	 Red / Netflix / Search
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 Angle	 Info / Angle	 Right	 Right
 4	 4	 Set Up	 Setup / OPT /
 5	 5	 Down	 Down
 6	 6	 Play	 Play / Slow
 Audio	 Audio / Lang I/II	 Title	 Sound / Title
 7	 7	 Pause	 Pause / Step / Freeze
 8	 8	 Stop	 Stop / Hold
 9	 9	 PBC	 Smart / List
 Subtitle	 Subtitle / EQ	 Return	 Back / Return





Original	Replacement
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Slow	 Shift + Slow Play /
 Program	 TV/Radio /
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Repeat	 Green / APP / Repeat
 AB	 Yellow / YouTube / Repeat
 Zoom	 Zoom / Size
 Step	 Shift + Pause / Step /
 Vol-	 Vol-
 Vol+	 Vol+
 Display	 Display / Media
 Key-	 CH- / Page-
 Key+	 CH+ / Page+

Original	Replacement

