 






















 
























 





























 


 


 
 










 
 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute / Dimmer	 +10	 Guide / EPG / -/-
 L/R/ST	 D.Menu / Top	 Clear	 Exit / Cancel / Clear
 Open / Close	 Eject / Surround	 Menu	 Menu / Home
 NTSC / PAL	 Picture / Format	 Up	 Up
 1	 1	 Search	 Red / Netflix / Search
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 Angle	 Info / Angle	 Right	 Right
 4	 4	 Set Up	 Setup / OPT /
 5	 5	 Down	 Down
 6	 6	 Play	 Play / Slow
 Audio	 Audio / Lang I/II	 Title	 Sound / Title
 7	 7	 Pause	 Pause / Step / Freeze
 8	 8	 Stop	 Stop / Hold
 9	 9	 PBC	 Smart / List
 Subtitle	 Subtitle / EQ	 Return	 Back / Return





	Original	Replacement	Original	Replacement
	I<< Skip	 I<< / Preset-		
	Skip >>I	 >>I / Preset+		
	Slow	 Shift + Play /		
	Program	 TV/Radio /		
	<< Scan	 << / Tune-		
	Scan >>	 >> / Tune+		
	Repeat	 Green / APP / Repeat		
	AB	 Yellow / YouTube / Repeat		
	Zoom	 Zoom / Size		
	Step	 Shift + Pause / Step /		
	Vol-	 Vol-		
	Vol+	 Vol+		
	Display	 Display / Media		
	Key-	 CH- / Page-		
	Key+	 CH+ / Page+		

