















 









Original	Replacement
 Display	 Display / Media
 Power	 Power
 Normal	 Shift + Display / Media
 Tv/Av/DVD	 TV/Radio /
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Aspect	 Smart / List
 0	 0
 Sound Mode	 Sound / Title

Original	Replacement
 Vol-	 Vol-
 Tv Menu	 Menu / Home
 Vol+	 Vol+
 Up	 Up
 PR+	 CH+ / Page+
 Left	 Left
 Right	 Right
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Down	 Down
 OK/Enter	 OK
 DVD Menu	 D.Menu / Top
 AV / Input / RDS	 AV / Input / RDS
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 [...]	 Subtitle / EQ
 <<	 << / Tune-



