



	Original	Replacement		Original	Replacement
	Power	Power		0/VCR	0
	[ + ]	Info / Angle		-/--	Guide / EPG / -/--
	Mute	Mute / Dimmer		Vol-	Vol-
	Tv/AV	AV / Input / RDS		Tv/Text	Text / Goto
	1	1		F.P.	Sleep / Timer
	2	2		[i]/Index	TV/Radio /
	3	3		[+]/Hold	Picture / Format
	CH+	CH+ / Page+		Red	Red / Netflix / Search
	4	4		Green	Green / APP / Repeat
	5	5		Yellow	Yellow / YouTube / Repeat
	6	6		Blue	Blue / Prime Video / Random
	CH-	CH- / Page-	<< button icon"/>	<<	<< / Tune-
	7	7		Play	Play / Slow
	8	8	>> button icon"/>	>>	>> / Tune+
	9	9		Stop	Stop / Hold
	Vol+	Vol+		[?]/Reveal	Smart / List
	C	Back / Return		[o]/Time Text	Display / Media





	Original	Replacement	Original	Replacement
	[x]/Display Cancel	 Subtitle / EQ		
	[♦]/F/T/B	 Setup / OPT /		
	STR	 OK		
	Up	 Up		
	N	 Fav / Marker / PC		
	[...]List/F.Text	 Audio / Lang I/II		
	Left	 Left		
	Menu	 Menu / Home		
	Right	 Right		
	Down	 Down		
	VCR Power	 +  Shift + Power		
	Rec VCR	 Rec / Rec Mode		
	Pause VCR	 Pause / Step / Freeze		
	II> VCR	 >>I / Preset+		
	Programme Down	 +  Shift + CH- /		
	Programme Up	 +  Shift + CH+ /		

