




































 








 























Original	Replacement	Original	Replacement
	Power		Tv/Radio
	Mute		i
	USB/Media 1		Sleep
	USB/Media 1		Source
	Play/Pause/Text		Menu
	Play/Pause/Text		Left
	Play/Pause/Text		Up
	Stop/Index		Right
	Rec/Media2		OK
	Rec/Media2		Down
	I<</Hold		Mouse
	>>I/Size		Smart
	<</S.Page		Exit
	>>/Reveal		CH+
	I-II/Nicam		EPG
	I-II/Audio		VOL+
	Subtitle		CH-
	Power		TV/Radio /
	Mute / Dimmer		Info / Angle
	Display / Media		Sleep / Timer
	Shift + 8		AV / Input / RDS
	Text / Goto		Menu / Home
	Play / Slow		Left
	Pause / Step / Freeze		Up
	Stop / Hold		Right
	Rec / Rec Mode		OK
	Shift + Display / Media		Down
	I<< / Preset-		Shift + OK
	>>I / Preset+		Smart / List
	<< / Tune-		Exit / Cancel / Clear
	>> / Tune+		CH+ / Page+
	Shift + Picture / Format		Guide / EPG / -/-
	Audio / Lang I/II		Vol+
	Subtitle / EQ		CH- / Page-





Original	Replacement
Open/Close	Eject / Surround
Vol-	Vol-
D.Setup	Setup / OPT /
Picture	Picture / Format
D.Menu	D.Menu / Top
Sound	Sound / Title
D.Title	Shift + Sound / Title
P.Size	Zoom / Size
D.Prog	Shift + TV/Radio / Program
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

