



 




 



 

 



 



 





 

 
 
 



 





 

 



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Video		Shift + 4		EPG		Guide / EPG / -/-
	Video		<< / Tune-		0		0
	Scart		Setup / OPT /		PRE PR		Back / Return
	Scart		>> / Tune+		Source		AV / Input / RDS
	PC		Fav / Marker / PC		Aspect		Shift + Picture / Format
	PC		I<< / Preset-		Dual		Audio / Lang I/II
	TV		TV/Radio /		Sleep		Sleep / Timer
	TV		>>I / Preset+		Picture		Picture / Format
	1		1		PR List		Smart / List
	2		2		Sound		Sound / Title
	3		3		Vol+		Vol+
	4		4		Mute		Mute / Dimmer
	5		5		P+		CH+ / Page+
	6		6		Vol-		Vol-
	7		7		Display		Display / Media
	8		8		P-		CH- / Page-





Original	Replacement
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Mix	 Shift + Text /
 Size	 Zoom / Size
 Subpage	 Eject / Surround
 Index	 Info / Angle
 Subtitle	 Subtitle / EQ

Original	Replacement
 Hold	 Stop / Hold
 Reveal	 D.Menu / Top

