












Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [ <> ]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Replacement
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Right
 +	 Vol+
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[ ]	 Setup / OPT /
 PAP/PAUSE	 Display / Media
 SIZE/STOP	 Zoom / Size
 POS/PLAY	 D.Menu / Top
 Red/<	 Red / Netflix / Search
 Green/>	 Green / APP / Repeat



















 










Original	Replacement
 Yellow/Pause/<	 Yellow / YouTube / Repeat
 Blue/>>	 Blue / Prime Video / Random







 
 


















 







Original	Replacement









Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+

Original	Replacement
	 Up
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-













Original	Replacement	Original	Replacement
 Blue/>>	 >> / Tune+		







Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home

Original	Replacement
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+





Original	Replacement	Original	Replacement
Yellow/<<	<< / Tune-		
Blue/>>	>> / Tune+		









Original	Replacement
	Power
	1
	2
	3
	Smart / List
	4
	5
	6
	Picture / Format
	7
	8
	9
	Guide / EPG / -/--
	0
	Info / Angle
	Menu / Home
	CH+ / Page+

Original	Replacement
	Up
	Vol-
	Left
	OK
	Vol+
	Right
	Text / Goto
	CH- / Page-
	Down
	AV / Input / RDS
	Setup / OPT /
	Pause / Step / Freeze
	Stop / Hold
	Play / Slow
	I<< / Preset-
	>>  / Preset+
	<< / Tune-





Original	Replacement	Original	Replacement
 Blue/>>>	 >> / Tune+		

