



 

 

 


 


 

 

 

 

 

 

 

 

 







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	[<>]		Picture / Format
	?		Info / Angle
	CEC		Display / Media
	Menu		Menu / Home
	Up		Up
	←		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide		Guide / EPG / -/--
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original	Replacement	Original	Replacement
PR-	CH- / Page-		
I<	I<< / Preset-		
>I	>>I / Preset+		
<<	<< / Tune-		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
Rec List	Smart / List		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		

