
 


 
 

 







 




 
 



 


 
 


 





Original	Replacement	Original	Replacement
Power ON/Off	 Power	Pr 2	 2
Vol Rs-/Effect	 3D	Pr 3	 3
Sleep	 SLEEP	Tape 1 F.FWD	 >>I
Tape 2 Pre./eq	 OPT	6 Ch/Geq	 LIST
CD/Theater	 DUAL	Tape 1 Play	 SHIFT +  Play
Funct./Direct	 SMART	Pr 4	 4
CD Play	 PLAY MODE	Pr 5	 5
Tape 1 Hall/Ats	 SUBT	Pr 6	 6
CD Random	 TV/R	Store/Center-	 MEDIA
Repeat	 TEXT	Pr 7	 7
Display	 INFO	Pr 8	 8
CD Rewind	 <<	Program	 D. MENU
CD F.FWD	 >>	Pr 9	 9
CD Pause	 II	Mode	 GUIDE
Volume+	 + VOL	Pr 0/10	 0
Volume-	 - VOL		
Pr 1	 1		



Original	Replacement	Original	Replacement
Power ON/Off	 Power	Pr 4	 4
Mute	 Mute	Pr 5	 5
Tape 1 Stop	 +  Shift + Stop	Phono/Scan	 Smart
Tape 2 Pre./eq	 Options	Pr 6	 6
Input/Source	 AV	Tape 1 Rew	 +  Shift + <<
CD/Theater	 Media	Tape 1 Play	 +  Shift + Play
Volume+	 Vol +	Tape 1 F.FWD	 +  Shift + >>
Tape 1 Hall/Ats	 Info	Pr 7	 7
CD Play	 Play	Tuner/Bypass	 Down
CD Rewind	 <<	Pr 8	 8
Funct./Direct	 Menu	Band	 Up
Stop	 Stop	Fm Mode/Disc	 Ok
CD F.FWD	 >>		
Volume-	 Vol -		
Pr 1	 1		
Pr 2	 2		
Pr 3	 3		

