





































Original	Replacement
 BT	 Shift + 9
 Power	 Power
 5.1/2.1	 Yellow / YouTube / Repeat
 USB/SD	 Shift + 8
 Optical	 Setup / OPT /
 AUX	 Shift + 7
 DVD	 Shift + 2
 Sleep+	 Up
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Sleep-	 Down
 FL-	 Left
 FL+	 Right
 FR-	 << / Tune-
 FR+	 >> / Tune+

Original	Replacement
 SW+	 CH+ / Page+
 Cen+	 Smart / List
 Vol+	 Vol+
 SW-	 CH- / Page-
 Cen-	 Display / Media
 Vol-	 Vol-
 SL-	 Shift + Down
 SL+	 Shift + Up
 SR-	 Shift + Left
 SR+	 Shift + Right
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original		Replacement		Original		Replacement	
	8		8				
	9		9				
	Repeat	 	Green / APP / Repeat				
	0		0				
	Reset	  	Exit / Cancel / Clear				
	Mic-	 + 	Shift + Vol-				
	Mic+	 + 	Shift + Vol+				
	Echo-	 + 	Shift + CH- /				
	Echo+	 + 	Shift + CH+ /				

