 



 



 



 


 
 
 

 






 
 

 
 

 







| Original | Replacement | Original | Replacement |
|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|  On |  Power |  1/Left/Right/1 |  << >> |
|  3D / Blue |  3D |  1/Left/Right/1 |  I<< I>> |
|  3D / Blue |  Blue |  1/Left/Right/1 |  1 |
|  Source / Yellow |  AV |  2/Play/Pause/Ente |  2 |
|  Source / Yellow |  Yellow |  2/Play/Pause/Ente |  Ok |
|  Setup/Media |  Media |  2/Play/Pause/Ente |  Play |
|  Setup/Media |  Options |  3/Stop/Back |  Stop |
|  Mode / Green |  Green |  3/Stop/Back |  Back |
|  Mode / Green |  Smart |  3/Stop/Back |  3 |
|  Hide |  Exit |  4/VGA |  4 |
|  Zoom |  Eject |  5/Component |  5 |
|  Freeze |  Pause |  6/Video |  6 |
|  Up |  Up |  7/SD/USB A |  7 |
|  Down |  Down |  8/HDMI/DVI |  8 |
|  Right |  Right |  9/LAN/Wifi |  9 |
|  Left |  Left |  0/USB B |  0 |
|  Menu |  Menu |  PgUp/Right/Left/1 |  Ch + |



