



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix / Search
	8		8		Return		Back / Return





Original	Replacement	Original	Replacement
	CH+		Yellow/Root
	Info		Blue/Title
	Vol+		
	CH-		
	Mute		
	Vol-		
	Rec		
	Pause		
	I<<		
	>>I		
	<<		
	Play		
	Stop		
	>>		
	Red/↑/Zoom		
	Red/↑/Zoom		
	Green/↓/Repeat		
	CH+ / Page+		Yellow / YouTube / Repeat
	Info / Angle		Blue / Prime Video / Random
	Vol+		
	CH- / Page-		
	Mute / Dimmer		
	Vol-		
	Rec / Rec Mode		
	Pause / Step / Freeze		
	I<< / Preset-		
	>>I / Preset+		
	<< / Tune-		
	Play / Slow		
	Stop / Hold		
	>> / Tune+		
	Red / Netflix / Search		
	Zoom / Size		
	Green / APP / Repeat		

