



Original	Replacement	Original	Replacement
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search		D.Setup
Green/Angle	Green / APP / Repeat		Rec
Yellow/Repeat	Yellow / YouTube / Repeat		Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto		Menu / Home
Freeze/Hold	Shift + Pause / Step /		Lang/Audio
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Replacement
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	Setup / OPT /
	Rec / Rec Mode
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Menu / Home
	Audio / Lang I/II
	Up
	Left
	OK
	Right
	Sleep / Timer
	Down





Original	Replacement
	Exit / Cancel / Clear
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	+  Shift + Guide / EPG / -/--

Original	Replacement
	0
	Back / Return
	AV / Input / RDS
	Picture / Format
	Sound / Title

