












 

 
 
 

 

 
 

 












 











 



 

 


 

 

 
 
 
 






Original	Replacement
 Standby	 Power
 DTV/VCR	 Smart
 Text	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 EPG	 Guide
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Setup	 Menu
 Exit	 Exit

Original	Replacement
 Source	 AV
 Tv/Radio	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right/FAV+	 Right
 Left/FAV-	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





	Original	Replacement		Original	Replacement
	9	9			
	0	0			
RECALL	Recall	RETURN BACK			
GOTO	Goto	ECO 3D			
FAVORITE	Favorite	FAV PRE-CH			
MODE	Mode	APP MEDIA			
AUDIO	Audio	SHIFT + SOUND DUAL			
LANGUAGE	Language	SOUND DUAL			
REPEAT	Red/Repeat	A			
A-B	Green/A-B	B			
ZOOM	Yellow/Zoom	C			
SUBTITLE	Blue/Subtitle	D			

	Original	Replacement

