





 

















 



 

 
 
 



 

 

 

 
 



 





 



 
 


 
 








Original	Replacement	Original	Replacement
 Standby	 Power	 Source	 AV
 DTV/VCR	 Smart	 Tv/Radio	 TV/R
 Text	 Text	 CH+	 Ch +
 Vol+	 Vol +	 CH-	 Ch -
 Vol-	 Vol -	 Up	 Up
 Mute	 Mute	 Down	 Down
 Info	 Info	 Right/FAV+	 Right
 EPG	 Guide	 Left/FAV-	 Left
 Play	 Play	 Enter	 Ok
 Pause	 Pause	 1	 1
 Stop	 Stop	 2	 2
 <<	 <<	 3	 3
 >>	 >>	 4	 4
 I<<	 I<<	 5	 5
 >>I	 >>I	 6	 6
 Setup	 Menu	 7	 7
 Exit	 Exit	 8	 8





	Original	Replacement	Original	Replacement
	9	9		
	0	0		
	Recall	Back		
	Goto	3D		
	Favorite	Pre Ch		
	Mode	Media		
	Audio	+ Shift + Dual		
	Language	Dual		
	Red/Repeat	Red		
	Green/A-B	Green		
	Yellow/Zoom	Yellow		
	Blue/Subtitle	Blue		

