
 
 

 




 

 






 





 





 

 
 









Original	Replacement	Original	Replacement
 Power	 Power	 List / Goto	 List
 Mute	 Mute	 Menu	 Menu
 Sleep	 Sleep	 Source	 AV
 P.Mode	 Shift + Format	 Aspect	 Format
 S.Mode	 Dual	 Recall	 Back
 Rec	 Rec	 Info	 Info
 DTV	 Smart	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 CH -	 Ch -
 6	 6	 CH +	 Ch +
 7	 7	 Vol -	 Vol -
 8	 8	 Vol +	 Vol +
 9	 9	 Audio	 Shift + Dual
 0	 0	 FAV / Title	 Pre Ch



