


 

 

 

 

 

 

 




| Original | | Replacement | |
|---|------------------|---|----------------------|
|  | On |  | Power |
|  | Off |  | Shift + Power |
|  | [+] |  | Shift + 3D / |
|  | Pic Mode |  | Auto |
|  | Lumiexpert Boost |  | Shift + Eco / Aspect |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Enter |
|  | Back |  | Shift + Source |
|  | Menu |  | Menu |
|  | Source |  | Source |
|  | Vol+ |  | Vol + / Page + |
|  | Vol- |  | Vol - / Page - |
|  | Mute |  | Blank / Mute |
|  | I< |  | Comp / Video |

| Original | | Replacement | |
|---|------------|---|----------------|
|  | Pause |  | 3D / Invert |
|  | > |  | Freeze / Timer |
|  | << |  | Help / Info |
|  | Play |  | + / Play |
|  | >> |  | Volt / Focus |
|  | Stop |  | - / Stop |
|  | Sound Mode |  | Mode |
|  | Eco Blank |  | Eco / Aspect |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

