 





 

 

 

 





 



 



 

 





 
 
 

 

 

 















 

 

 









Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-







 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 




Original	Replacement
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	Blue / Prime Video / Random
Blue / >>I	>>I / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [=X]	Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





	Original	Replacement	Original	Replacement
	Green	 Green / APP / Repeat		
	>>	 >> / Tune+		
	Yellow	 Yellow / YouTube / Repeat		
	I<<	 I<< / Preset-		
	Blue	 Blue / Prime Video / Random		
	>>I	 >>I / Preset+		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	[≡]	 Text / Goto		
	Stop/Still	 Stop / Hold		
	[≡+]	 Picture / Format		
	[≡o]/Subtitle	 Subtitle / EQ		
	[≡◆]/[+]	 Zoom / Size		
	[≡x]	 Setup / OPT /		
	Radio	 TV/Radio /		
	Audio	 Audio / Lang I/II		
	Rec	 Rec / Rec Mode		

