







 

 





 




























 































Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 CH- / Page-
 DTV/VCR	 AV / Input / RDS	 Down	 Down
 Mute	 Mute / Dimmer	 Favorite	 Fav / Marker / PC
 Info	 Info / Angle	 1	 1
 Play	 Play / Slow	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 Menu	 Menu / Home	 Game	 Display / Media
 EPG	 Guide / EPG / -/--	 4	 4
 Exit	 Exit / Cancel / Clear	 5	 5
 Up	 Up	 6	 6
 CH+	 CH+ / Page+	 Recall	 Back / Return
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9
 Right	 Right	 0	 0
 Vol+	 Vol+	 Tv/Radio	 TV/Radio /
 Rec List	 Smart / List	 Audio	 Audio / Lang I/II

Original	Replacement	Original	Replacement
 CH-	 CH- / Page-	 CH- / Page-	 CH- / Page-
 Down	 Down	 Fav / Marker / PC	 Fav / Marker / PC
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 Game	 Display / Media
 4	 4	 4	 4
 5	 5	 5	 5
 6	 6	 6	 6
 Recall	 Back / Return	 7	 7
7	7	8	8
8	8	9	9
9	9	0	0
0	0	TV/Radio /	TV/Radio /
Tv/Radio	TV/Radio /	Audio	Audio / Lang I/II
Audio	Audio / Lang I/II		



