



 
















Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Vol+		Vol+
	Right		Right
	CH-		CH- / Page-
	Down		Down
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search
	TTX		Text / Goto
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	i		Info / Angle
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /





Original	Replacement
 Video	 Shift + 4
 Scan	 AV / Input / RDS
 Record	 Rec / Rec Mode
 Device	 Smart / List
 File	 Display / Media
 Zoom	 Zoom / Size
 Prev	 I<< / Preset-
 Next	 >>I / Preset+
 Roll	 Sound / Title
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement

