 
 
 
 
 




 
 

 
 


 
 



 




 












 

 


 


Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV/R
 Source	 AV	 Recall	 Pre Ch
 Vol+	 Vol +	 World	 Media
 Vol-	 Vol -	 Menu	 Menu
 Mute	 Mute	 Exit	 Exit
 PR+	 Ch +	 Back	 Back
 PR-	 Ch -	 i/Info	 Info
 1	 1	 Guide	 Guide
 2	 2	 [≡]/Text	 Text
 3	 3	 */O	 Format
 4	 4	 */O..	 3D
 5	 5	 LANG.	 Dual
 6	 6	 [≡]..	 Subt
 7	 7	 [-O-]	 Options
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow

Original	Replacement	Original	Replacement
 TV	 TV/R	 TV/R	 TV/R
 Recall	 Pre Ch	 PRE-CH	 Pre Ch
 World	 Media	 MEDIA	 Media
 Menu	 Menu	 MENU	 Menu
 Exit	 Exit	 EXIT	 Exit
 Back	 Back	 BACK	 Back
 i/Info	 Info	 INFO	 Info
 Guide	 Guide	 GUIDE	 Guide
 [≡]/Text	 Text	 TEXT	 Text
 */O	 Format	 FORMAT	 Format
 */O..	 3D	 3D	 3D
 LANG.	 Dual	 DUAL	 Dual
 [≡]..	 Subt	 SUBT	 Subt
 [-O-]	 Options	 OPT	 Options
 Red	 Red	 A	 Red
 Green	 Green	 B	 Green
 Yellow	 Yellow	 C	 Yellow





Original		Replacement		Original		Replacement	
	Blue		Blue				
	Rec		Rec				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Music/Photo/Movi		Smart				
	Q.Menu		D. Menu				

