 











Original		Replacement		Original		Replacement	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		I>/Resume		Shift + Play /
	4		4		Surround		Eject / Surround
	5		5		Sound		Sound / Title
	6		6		Night		Shift + Sleep / Timer
	7		7		Mute		Mute / Dimmer
	8		8		Repeat		Green / APP / Repeat
	9		9		Repeat A-B		Yellow / YouTube / Repeat
	0		0		Sleep		Sleep / Timer
	Vol+		Vol+		DIM		Shift + Mute / Dimmer
	Vol-		Vol-		Subw +		Up
	Left		Left		Rear +		Shift + CH+ /
	Right		Right		Center +		CH+ / Page+
	I<<		I<< / Preset-		Tv Vol+		Shift + Vol+
	>>I		>>I / Preset+		Subw -		Down





Original		Replacement	
	Rear -	 + 	Shift + CH- /
	Center -		CH- / Page-
	Tv Vol-	 + 	Shift + Vol-

Original	Replacement





Original	Replacement
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc (DVD)	D.Menu / Top
0	0
Vol+	Vol+
System (DVD)	Menu / Home
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Replacement
Stop	Stop / Hold
Play/Pause	Play / Slow
I>/Resume	Shift + Play /

 



 





 

 

 

 

 

 





Original	Replacement	Original	Replacement
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original	Replacement	Original	Replacement
 Standby	 Power		
 1	 TV 1		
 2	 DVD 2		
 3	 CD - STB 3		
 4	 VIDEO 4		
 5	 TAPE 5		
 6	 TUNER 6		
 7	 AUX - HDD 7		
 8	 USB 8		
 9	 BLUETOOTH 9		
 0	 HDMI - SAT 0		

