



| Original | Replacement | Original | Replacement |
|---|------------------|---|-------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Text |  | Text |
|  | Back / S.Page |  | Back |
|  | index / PVR List |  | Smart |
|  | reveal / REC |  | Rec |
|  | zoom / T.Shift |  | Eject |
|  | hold / EPG |  | Guide |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | I-II |  | Dual |
|  | Source |  | AV |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | Sleep |  | Sleep |
|  | Menu |  | Menu |
|  | DTV / Radio |  | TV/R |
|  | Exit |  | Exit |
|  | Aspect |  | Format |
|  | Up |  | Up |





| Original | Replacement | Original | Replacement |
|---|-----------------|---|----------------|
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | P.Mode |  +  | Shift + Format |
|  | S.Mode |  +  | Shift + Dual |
|  | Media |  | Media |
|  | Slow / Info |  | Info |
|  | Slow / Info |  +  | Shift + Play |
|  | Step / Subtitle |  | Subt |
|  | Freeze |  +  | Shift + Stop |
|  | Step / Subtitle |  +  | Shift + Pause |
|  | Play / Pause |  | Play |
|  | Play / Pause |  | Pause |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Stop |  | Stop |
| | |  | << |
| | |  | >> |
| | |  | FAV |
| | |  | Pre Ch |
| | |  | Repeat / Fav + |
| | |  +  | Shift + Right |
| | |  | A-B / Fav - |
| | |  +  | Shift + Left |

