



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-		Guide
	Recall		Back
	Source		AV
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	P.Mode		Format
	S.Mode		Dual
	CH+		Ch +
	CH-		Ch -
	Input		Shift + AV
	Fav / Angle		Pre Ch
	Zoom		Eject
	Sleep		Sleep
	Red		Red





Original	Replacement	Original	Replacement
Green / 3D	Green		
Green / 3D	3D		
Yellow	Yellow		
Blue	Blue		
Play / Pause	Play		
Play / Pause	Pause		
FR	<<		
FF	>>		
Stop	Stop		
Prev	I<<		
Next	>>I		
Media	Media		
Keyboard	Text		
PC	D. Menu		
Refresh	List		
Search	TV/R		
Home	Smart		

