

 







 






 


 
 

 









 

 

 

 




 
 
 

 



 
 
 
 
 






 








Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 Ch -
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 OK/i	 Ok
 6	 6	 Left	 Left
 7	 7	 X	 Exit
 8	 8	 PVR	 Back
 9	 9	 Red	 Red
 0	 0	 Green	 Green
 Tv/Radio	 TV/R	 Yellow	 Yellow
 ←	 Pre Ch	 Blue/Ubione	 Blue
 Jezyk	 Dual	 Menu	 Menu
 Obraz	 Format	 EPG	 Guide
 CH+	 Ch +	 Rec	 Rec





Original		Replacement		Original		Replacement	
	Cyfrowy/Polsat		Smart				
	<<		<<				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				

