 


 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	EPG		Guide / EPG / -/--
	Settings		Setup / OPT /
	Up		Up
	Input		AV / Input / RDS

Original	Replacement	Original	Replacement
	Left		Left
	OK		OK
	Right		Right
	List		Smart / List
	Down		Down
	Back		Back / Return
	NETFLIX		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /
	Vol+		Vol+
	Google Assistant		Display / Media
	P+		CH+ / Page+
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Text		Text / Goto





Original	Replacement	Original	Replacement
USB	+ Shift + 8		
I/II	Audio / Lang I/II		
Subt	Subtitle / EQ		
Play / Text Mix	Play / Slow		
Pause	Pause / Step / Freeze		
Stop / Text Hold	Stop / Hold		
Text Size	Zoom / Size		
<< / Text	<< / Tune-		
I<< / Text Index	I<< / Preset-		
>>I / Text Reveal	>>I / Preset+		
>> / Text Cancel	>> / Tune+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

