



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/Radio /
 TV / Sat	 Display / Media
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Group	 Smart / List
 Pause	 Pause / Step / Freeze
 Color	 Picture / Format
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 Page+	 >> / Preset+
 Page-	 << / Preset-





Original

Replacement

	UHF		AV / Input / RDS
	Red / Recall		Red / Netflix / Search
	Red / Recall		Back / Return
	Green / Audio		Green / APP / Repeat
	Green / Audio		Audio / Lang I/II
	Yellow / Text		Yellow / YouTube / Repeat
	Yellow / Text		Text / Goto
	Blue		Blue / Prime Video / Random

Original

Replacement



Mandis

Mandis

Clarke-Tech

Mandis SHOP
www.mandis.tv