



| Original   | Replacement  |
|--|--|
|  Power        |  Power                |
|  Mute         |  Mute / Dimmer        |
|  1            |  1                    |
|  2            |  2                    |
|  3            |  3                    |
|  4            |  4                    |
|  5            |  5                    |
|  6            |  6                    |
|  7            |  7                    |
|  8            |  8                    |
|  9           |  9                   |
|  0          |  0                  |
|  TV / Radio |  TV/Radio /         |
|  TV / Sat   |  Display / Media    |
|  Menu       |  Menu / Home        |
|  EPG        |  Guide / EPG / -/-- |
|  Info       |  Info / Angle       |

| Original   | Replacement   |
|--|---|
|  Exit         |  Exit / Cancel / Clear   |
|  Up / CH+     |  Up                      |
|  Up / CH+     |  CH+ / Page+             |
|  Down / CH-   |  Down                    |
|  Down / CH-   |  CH- / Page-             |
|  OK           |  OK                      |
|  Right / Vol+ |  Right                   |
|  Right / Vol+ |  Vol+                    |
|  Left / Vol-  |  Left                    |
|  Left / Vol-  |  Vol-                    |
|  Group       |  Smart / List           |
|  Pause      |  Pause / Step / Freeze |
|  Color      |  Picture / Format      |
|  Page+      |  Shift + CH+ /         |
|  Page-      |  Shift + CH- /         |
|  Page+      |  >>  / Preset+         |
|  Page-      |   << / Preset-         |



