



| Original  | Replacement  | Original  | Replacement  |
|---|--|---|--|
|  Power       |  Power              |  Vol+          |  Vol+                     |
|  Mute        |  Mute / Dimmer      |  Vol-          |  Vol-                     |
|  1           |  1                  |  Menu          |  Menu / Home              |
|  2           |  2                  |  Recall        |  Back / Return            |
|  3           |  3                  |  P+            |  Shift + CH+ /            |
|  4           |  4                  |  P-            |  Shift + CH- /            |
|  5           |  5                  |  Text          |  Text / Goto              |
|  6           |  6                  |  Exit          |  Exit / Cancel / Clear    |
|  7           |  7                  |  Fav           |  Fav / Marker / PC        |
|  8           |  8                  |  EPG           |  Guide / EPG / -/-        |
|  9         |  9                |  Up          |  Up                     |
|  0 / Sleep |  0                |  Left        |  Left                   |
|  0 / Sleep |  Sleep / Timer    |  OK          |  OK                     |
|  TV/Rad    |  TV/Radio /       |  Right       |  Right                  |
|  TV / SAT  |  AV / Input / RDS |  Down        |  Down                   |
|  CH+       |  CH+ / Page+      |  Red / V-FMT |  Red / Netflix / Search |
|  CH-       |  CH- / Page-      |  Red / V-FMT |  Picture / Format       |





| Original  | Replacement                                 | Original  | Replacement            |
|---|---|---|------------------------|
|    | Green<br>Green / APP / Repeat               |  | II><br>Shift + Right   |
|    | Yellow<br>Yellow / YouTube / Repeat         |  | Movie<br>Smart / List  |
|    | Blue / Timer<br>Blue / Prime Video / Random |  | USB<br>Shift + 8       |
|    | Blue / Timer<br>Shift + Sleep / Timer       |  | USB<br>Display / Media |
|    | Info<br>Info / Angle                        |   |                        |
|    | Subt<br>Subtitle / EQ                       |   |                        |
|    | Audio<br>Audio / Lang I/II                  |   |                        |
|    | Find<br>Shift + Red / Netflix /             |   |                        |
|    | Rec<br>Rec / Rec Mode                       |   |                        |
|    | Stop<br>Stop / Hold                         |   |                        |
|  | Play<br>Play / Slow                         |   |                        |
|  | Pause<br>Pause / Step / Freeze              |   |                        |
|  | <<<br><< / Tune-                            |   |                        |
|  | >><br>>> / Tune+                            |   |                        |
|  | I<<<br>I<< / Preset-                        |   |                        |
|  | >>I<br>>>I / Preset+                        |   |                        |
|  | <II<br>Shift + Left                         |   |                        |

