


 
 


 

 







 






 
 






 

 


 





 




 


 
 






 










Original		Replacement		Original		Replacement	
	Power		Power		NICAM		VOD
	Mute		MUTE		Menu		MENU
	1		1		Source		SRC
	2		2		Up		UP
	3		3		Down		DOWN
	4		4		Right		RIGHT
	5		5		Left		LEFT
	6		6		OK		OK
	7		7		Exit		EXIT
	8		8		Display		MEDIA
	9		9		Vol +		VOL +
	0		0		Vol -		VOL -
	-/--		-/-- / EPG		List		INFO
	Back		BACK		Fav List		P/C / FAV
	P.Mode		V-FOR		CH +		CH +
	S.Mode		Audio		CH -		CH -
	Sleep		Shift + Power		TV / Radio		TV/R





Original	Replacement
CPG	Shift + VOD
Aspect	Shift + V-FOR
Freeze	Pause
Index	Shift + INFO
Cancel	Shift + EXIT
Subpage	Subt.
Text	TEXT
Reveal	OPT+
Size	WIDE
Hold	Stop
Mix	Rec
Red	Red (A)
Green	Green (B)
Yellow	Yellow (C)
Cyan	Blue (D)

Original	Replacement

