 



 



 









 





 











 

 
 


Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle
 TTX	 Text / Goto
 Audio	 Audio / Lang I/II
 DTV/VCR	 Smart / List
 Subtitle	 Subtitle / EQ
 Menu	 Menu / Home
 UP	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 CH+ / Page+	 CH+ / Page+
 CH- / Page-	 CH- / Page-
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Vol-	 Vol-
 Vol+	 Vol+
 Favourite	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-





Original	Replacement	Original	Replacement
 FWD    >>	 TUNE+    >> / Tune+		
 PREV     <<	 PRESET-     << / Preset-		
 NEXT    >>	 PRESET+    >>  / Preset+		
 PLAY    Play	 SLOW    Play / Slow		
 PAUSE    Pause	 STEP-FREEZE    Pause / Step / Freeze		
 STOP    Stop	 HOLD    Stop / Hold		
 REPEAT    Repeat	 SHIFT + APP    Shift + Green / APP / Repeat		
 Red	 NETFLIX SEARCH    Red / Netflix / Search		
 Green	 APP REPEAT    Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B    Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM    Blue / Prime Video / Random		

