







 

 





 

 

 



 
 


 

 




 





 












 



 
 












Original	Replacement
	 Power
	 TV/Radio /
	 Mute / Dimmer
	 Text / Goto
	 [...] / Subtitle
	 Audio / Lang I/II
	 [+] / Mosaic
	 Sleep / Timer
	 Shift + Pause / Step /
	 Zoom / Size
	 Guide / EPG / -/--
	 i / Info
	 Back / Return
	 Display / Media
	 Menu / Home
	 Exit / Cancel / Clear
	 Vol+

Original	Replacement
	 Left
	 CH+ / Page+
	 Up
	 Shift + CH+ /
	 Vol-
	 OK
	 Right
	 Shift + CH- /
	 CH- / Page-
	 Down
	 Smart / List
	 Play / Slow
	 Stop / Hold
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 >> / Preset+



