





 
 
 

 
 

 



 


 

















	Original	Replacement	Original	Replacement
	On/Standby	 Power		
	Source Power	 Shift + Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	Channel+	 Ch +		
	Channel-	 Ch -		





Original	Replacement	Original	Replacement
 On/Standby	 Power	 I<</Channel-	 I<<
 Play	 Play	 >>/Tuning+	 >>
 Stop	 Stop	 <</Tuning-	 <<
 Still/Pause	 Pause	 DVS/Stereo	 Dual
 Mute	 Mute	 Display	 Info
 Vol+	 Vol +	 Subwoofer Level+	 Ch +
 Vol-	 Vol -	 Subwoofer Level-	 Ch -
 Push/Enter	 Ok	 Source Power	 Shift + Power
 Up	 Up	 DVD/CD	 Red
 Down	 Down	 FM/AM	 Green
 Right	 Right	 AUX	 Yellow
 Left	 Left	 iPod	 Blue
 Menu/Guide	 Guide	 Home	 Smart
 Top Menu	 Menu	 Net/USB	 Media
 Return	 Back	 1	 1
 Tool	 Options	 2	 2
 >>I/Channel+	 >>I	 3	 3








 







 
 

 
 
 

 




 

 
 







	Original	Replacement		Original	Replacement
	4		4		Audio RDS
	5		5		Shift + Dual
	6		6		Subtilte/PTY
	7		7		Angle/CT
	8		8		Zoom/RT
	9		9		Surround
	0		0		Surround
	+10		Pre Ch		Memo
	Clear		Exit		
	HDMI		Shift + Media		
	Sleep		Sleep		
	Call		Shift + Pre Ch		
	Program		Shift + Sleep		
	Repeat		Text		
	Random		TV/R		
	Status		AV		
	Tone		List		






 


 

 






 





	Original	Replacement		Original	Replacement
	On/Standby	 Power			
	Source Power	 Shift + Power			
	Channel+	 Ch +			
	Channel-	 Ch -			
	Vol+	 Vol +			
	Vol-	 Vol -			
	Mute	 Mute			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			





Original	Replacement	Original	Replacement
 On/Standby	 Power		
 Source Power	 Shift + Power		
 Play	 Play		
 Stop	 Stop		
 Still/Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Channel+	 Ch +		
 Channel-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		

