


 



 
 
 




 




 








 




 
 

 



 
 
 
 

 

 


 

 
 


 


 




Original	Replacement	Original	Replacement
 On / Standby	 Power	 Repeat	 Text
 Dimmer	 Subt	 Source	 AV
 Sleep	 Sleep	 Tuner	 TV/R
 1	 1	 << / TU -	 <<
 2	 2	 >> / TU +	 >>
 3	 3	 I<< / CH - / Play Rev	 I<<
 4	 4	 I<< / CH - / Play Rev	 Ch -
 5	 5	 >>I / CH + / Play	 >>I
 6	 6	 >>I / CH + / Play	 Ch +
 7	 7	 CD Play / Pause	 Play
 8	 8	 Stop	 Stop
 9	 9	 USB/iPod	 Pause
 0	 0	 Volume +	 Vol +
 +10	 Guide	 Volume -	 Vol -
 Clear / Del	 Exit	 SDB / Tone	 Options
 Prog / Direct	 Shift + Sleep	 Mute	 Mute
 Random	 D. Menu	 Folder Mode	 Smart





Original	Replacement	Original	Replacement
Menu	Menu		
Dock	+  Shift + Play		
DAB / RDS	Dual		
Up / Folder +	Up		
Down / Folder -	Down		
Left	Left		
Enter / Memo	Ok		
Right	Right		
Time / Display	Info		
Clock	+  Shift + AV		
Remote /	Media		

