



 













 

 





	Original	Replacement	Original	Replacement
	Power	 Power		
	Muting	 Mute / Dimmer		
	Track >>I	 >>I / Preset+		
	Function Up	 CH+ / Page+		
	Volume Up	 Vol+		
	I<< Track	 I<< / Preset-		
	Function Down	 CH- / Page-		
	Volume Down	 Vol-		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	Play	 Play / Slow		

